


Pressure Reduction Valve

PRV IMPROVED MODEL

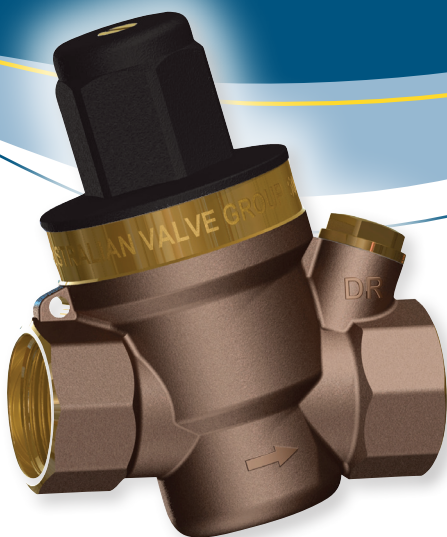

**SUITABLE FOR
INSTALLATION
BELOW GROUND
IN A SUITABLE
APPROVED BOX!**

FEATURES

- No breather hole
- Adjustable Range 150 – 600 kPa
- Compact design, body length only 78mm
- DZR brass valve body
- Factory set at 500 Kpa
- Internal strainer
- High Flow rate

PRESSURE REDUCTION VALVE


A pressure reduction valve (PRV) can be a valuable addition to many piping systems. If the incoming water pressure is too high, this can put unnecessary strain on water heaters, pipe work, plumbing joints, taps and tap washers. It can increase the risk of burst hoses on washing machines, water leaks and possibly magnify any existing water hammer problems.

The valves are factory set at 500 Kpa. The down stream pressure is adjustable from 150 to 600 kpa by turning the screw on top of the plastic cover. Clockwise to increase pressure and anticlockwise to reduce pressure. A gauge port is standard on the body of the valve so that a gauge can be fitted to monitor the downstream pressure.

For ease of maintenance, the valve has a removable cartridge and strainer, containing all the regulating components which can be easily accessed through the top of the valve.

The tagging eye has been cast into the PRV body to allow the valve to be identified and tagged for mechanical service.

ADJUSTABLE FROM 150-600 KPA

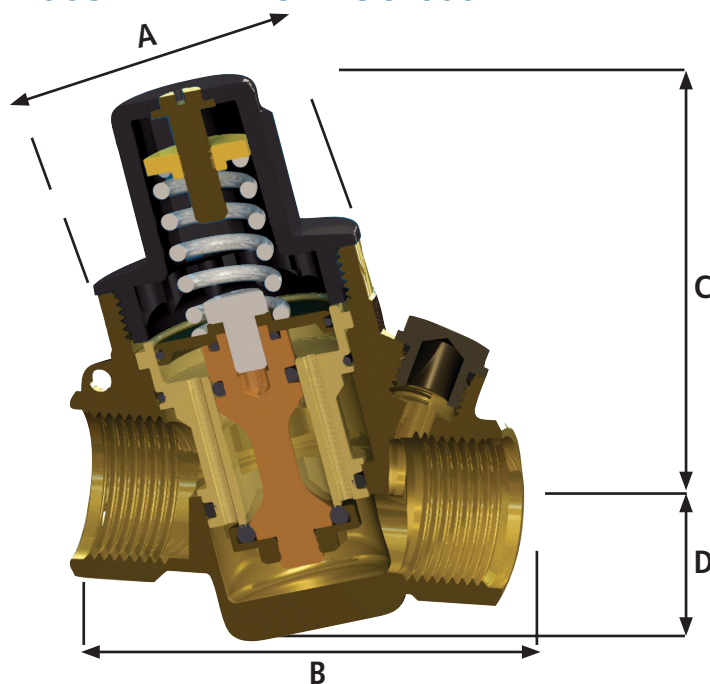

MODEL	DN SIZE	A	B	C	D
PRV15	1/2"	49mm	78mm	73mm	24mm
PRV20	3/4"	49mm	78mm	73mm	24mm

TECHNICAL SPECIFICATIONS

MATERIALS

Body	DR Brass
Cover	Glass Reinforced ABS
Control Spindle	DR Brass
Cartridge	Hi Temp Polymer
Components	DR Brass
Diaphragm	Hi Temp Silicon Rubber
Seals	Hi Temp Silicon Rubber
Strainer	Stainless Steel

Spring	Stainless Steel
--------	-----------------

PERFORMANCE

Pressure setting range	150-600 kPa
Factory Setting	500 kPa
Max inlet Pressure	1600 kPa
Max working Temperature	80°C
Medium	Water
Complies with	AS1357.2
Flow rate as per Appendix K @ 700 kPa dynamic	
PRV15 set pressure 500 kPa Flow rate 59 L/Min	
set pressure 100 kPa Flow rate 10 L/Min	
PRV20 set pressure 500 kPa Flow rate 120 L/Min	
set pressure 100 kPa Flow rate 20 L/Min	

AVG

Australian Valve Group

installation

INSTRUCTIONS

INSTALLATION

The pressure reduction valve must be installed by a licensed plumber and in accordance with AS/NZS 3500, relevant local requirements and the following manufacturer's instructions.

IMPORTANT NOTE

Flush out your lines to remove any debris or dirt particles that may cause the valve to malfunction.

1. The pressure reduction valve may be installed horizontally or vertically.
2. It is recommended that isolation valves be fitted either side of the pressure reduction valve to assist future maintenance operations.
3. The PRV15 and PRV20 are protected by an internal stainless steel meshfilter. If the valve is being installed in an environment where fine dirt particles are present it is recommended that a line strainer be fitted upstream of the valve.
4. Ensure that the valve is installed in an accessible position for future maintenance operations.

5. Install the valve with the arrow on the valve body pointing in the direction of flow.

For best operation the inlet pressure should be at least 100 kPa higher than the outlet pressure.


RECOMMENDATIONS FOR INSTALLATION

1. Suitable for installation below ground in a suitable approved box.
2. If the installation is at risk of water hammer, fit a water hammer arrestor.
3. If the pressure setting is important for the protection of equipment fit a pressure relief valve downstream of the valve.

*Installation Suggestion:

Multistorey Buildings - where multiple pressure reducing valves will be used as part of a hydraulic circuit, consideration should be given to the design of the hydraulic circuit to avoid the operating condition where combined high inlet pressure/low outlet flow-rate results in high water velocity within the Pressure Reducing Valve. Where inlet pressures are likely to exceed 1,000 kPa, this may be achieved through staged pressure reduction measures.

TYPICAL INSTALLATION OF CONTROLLED PRESSURE HOT WATER SYSTEM

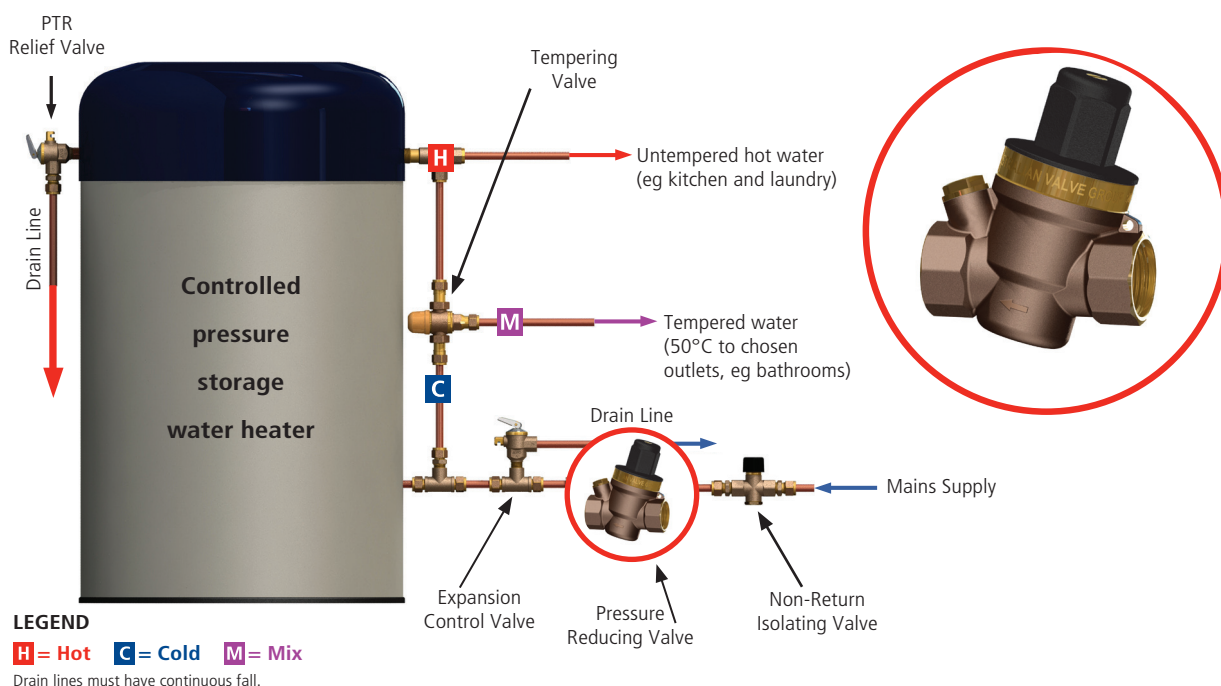

Note : The tempering valve may be installed at the point of use, but there must be a minimum 1 pipe run between the valve and the outlet of the tap.

DISCLAIMER

Every care has been taken in the preparation of these instructions, which have been issued as a guide only. Compliance with the requirements of local Authorities is required at all times. These requirements may change from time to time. Always be aware of the local requirements. Subject to any statutory obligations and manufacturers warranties no liability can be accepted for any losses, consequential or otherwise which may arise or be said to have arisen from relying upon the contents of this installation instruction as to the fitness of any particular product for any particular purpose, use or application. The Australian Valve Group Pty Ltd reserves the right to modify designs and specifications and to withdraw and introduce products at any time without notice.

AVG

Australian Valve Group

Australian Valve Group (Head Office)
Unit 2, 9-11 Noble St, Kewdale, Perth, Western Australia 6105
Fax: +61 8 9353 2689 Tel: 1800 AVG AUS (284 287)

FOR MORE INFORMATION VISIT OUR WEBSITE AT WWW.AVG.NET.AU

Pressure Reduction Valve